



CIRCULAR SAW

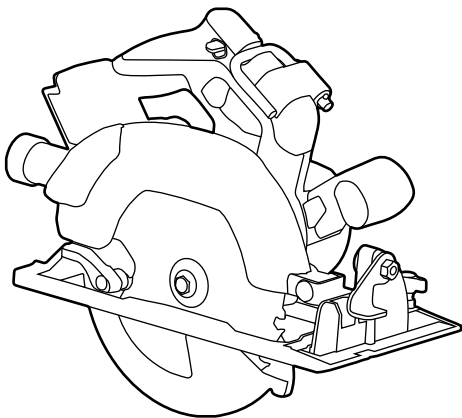

Depending on the model purchased, packaging will contain different accessories and parts.
Refer to the package for more details.



KNOW YOUR PRODUCT

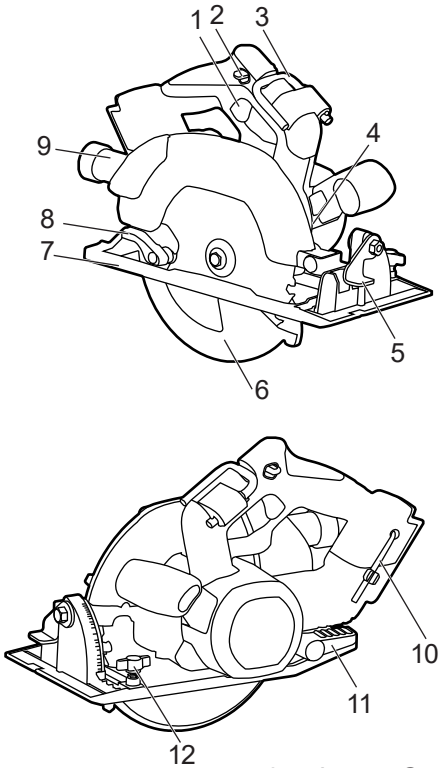


- | | |
|--------------------------|--------------------------------------|
| 1. Trigger | 8. Lower Guard Lever |
| 2. Trigger Lockout | 9. Vac-Adapter Port |
| 3. Hook | 10. Hex Key |
| 4. Spindle Lock Button | 11. Depth Adjustment Lever |
| 5. Bevel Adjustment Knob | 12. Straight-Edge Guide Locking Knob |
| 6. Lower Guard | |
| 7. Base | |

INSTALLATION



Install the blade

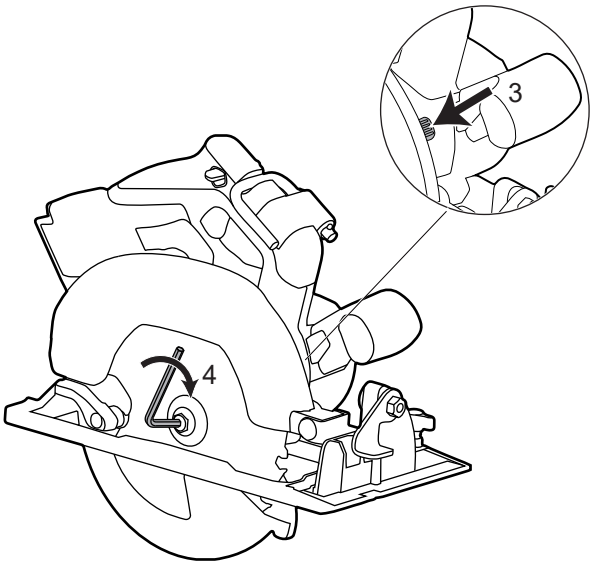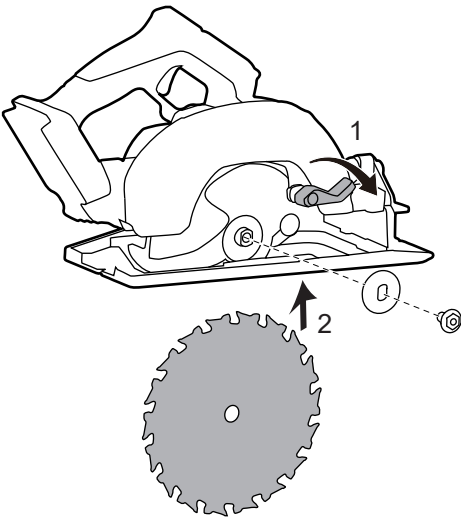

Install the vac-adapter port

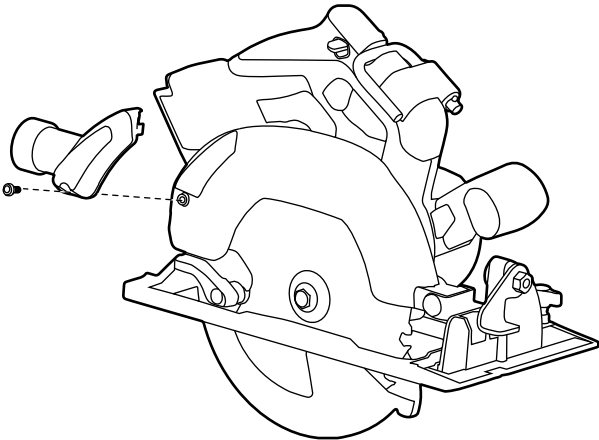

Set the cutting angle

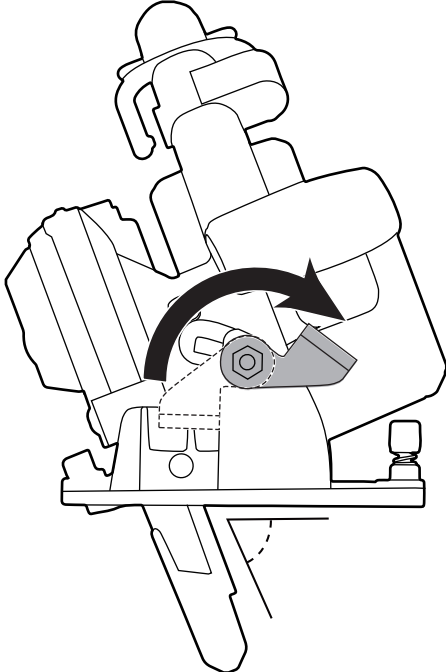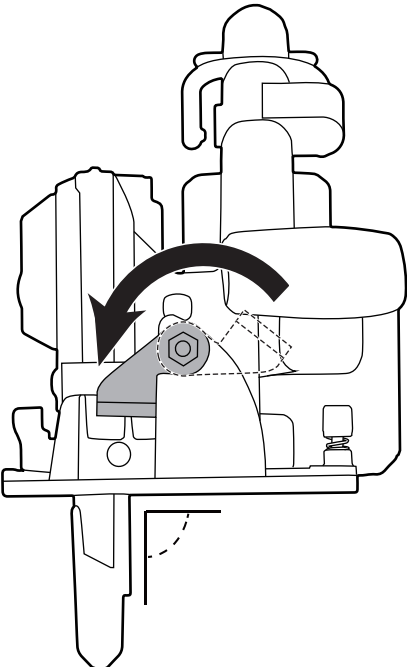

Europe
www.greenworkstools.eu



USA
www.greenworkstools.com




Canada
www.greenworkstools.ca

Rev B




Set the cutting depth

7

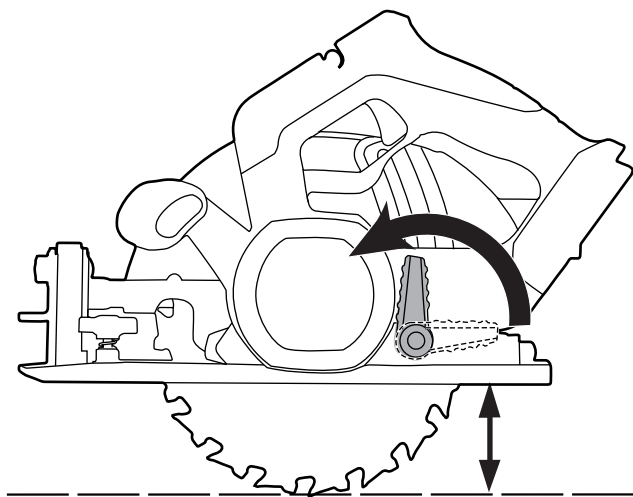

Set the cutting width


8

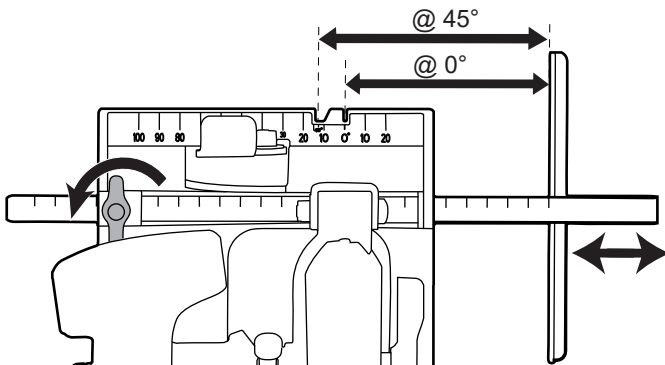


OPERATION

Connect the battery to the product

10


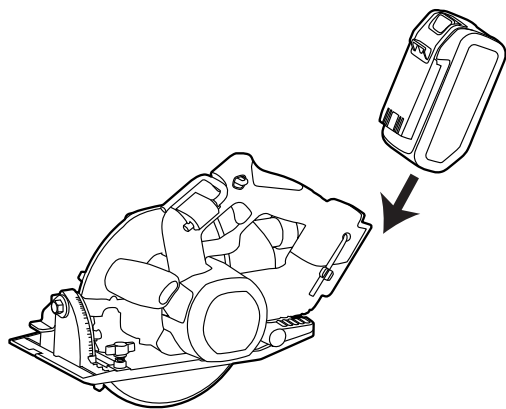


Start the product

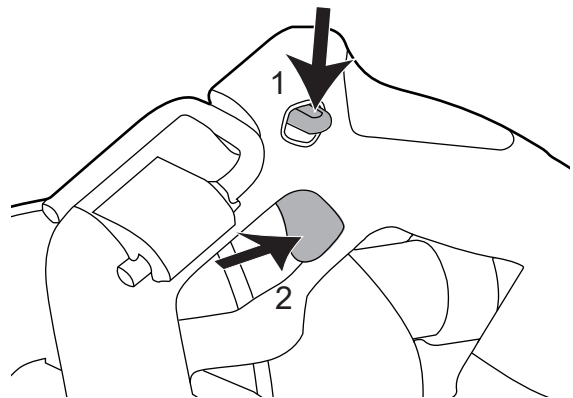

OPERATION TIPS


11

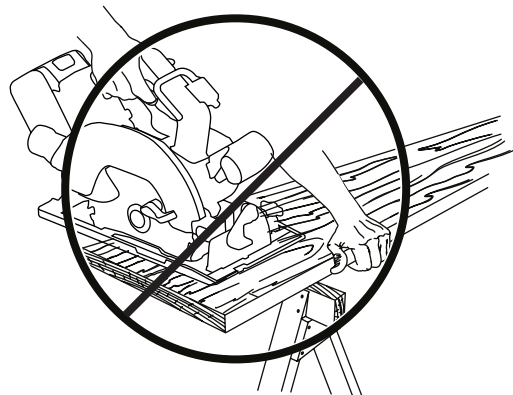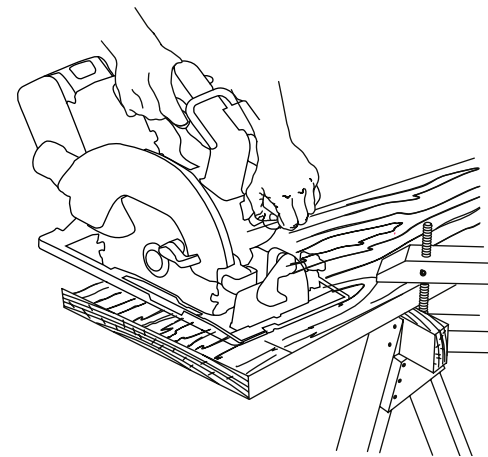

MAINTENANCE


Remove the battery

12

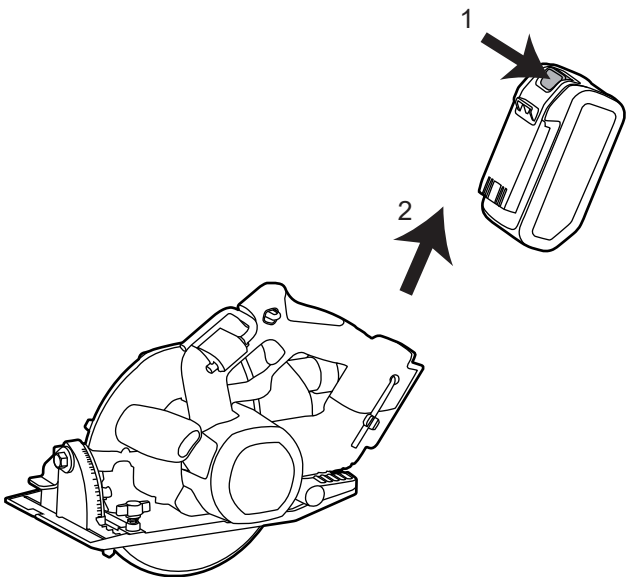

Remove the blade

13

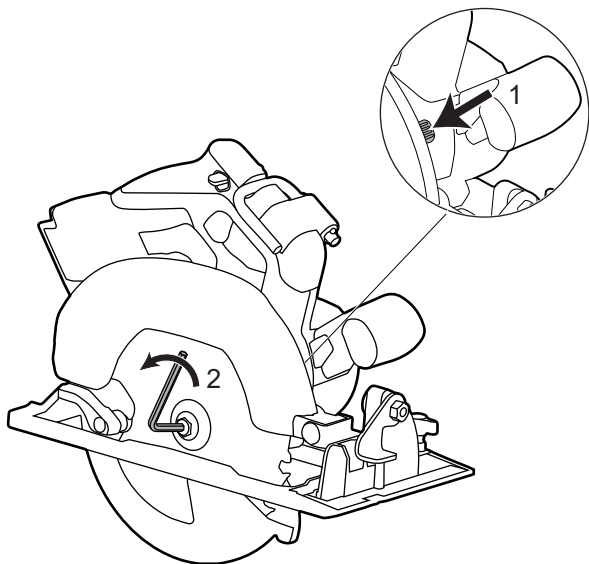

14

